



How to change brush pile seal in PVC profile frames



*****IMPORTANT*** The channel in which the seal is slotted will need cutting to pull out old strip and insert replacement**

Cut a small notch out of the channel and use pliers to pull out the old brush pile.


Cut the ends of the new brush to a point (arrow shape) to help guide into the channel through the notch.

EXT12X6.9GREY

GREY BRUSH/WOOL PILE STRIP FOR PVC FRAMES

NB - each PVC frame includes 2x5m rows of brush pile seal

See video for help:

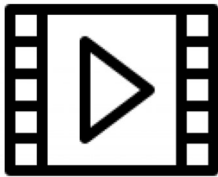

<https://www.youtube.com/watch?v=9H4ujx2sS-A>