

Important Information

v2




This is what happens when the lockblock section of a GRP door is saturated in water. The layers of timber expand pushing the skin off the door causing delamination.



+

Rain getting into the lockblock through the holes made for cylinder & handles.....

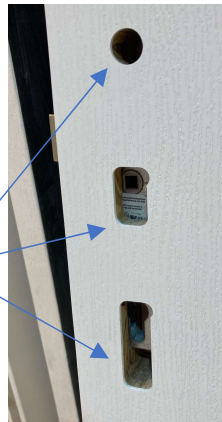

=

....could cause delamination.



Remember: The doorset is not weatherproof until fully installed, sealed and with all hardware fitted correctly.

Help prevent this happening to your doors by:

- ✓ Store doors indoors in a dry area whilst on site prior to fitting
- ✓ Do not expose doors to weather prior to installation, keep covered when moving around the site
- ✓ Ensure all hardware is fitted as soon as possible after installation
- ✓ If the handle cannot be fitted when installing doorset then cover holes with low-tac tape

NB – The door bag and pallet shrinkwrap are packaging for transportation purposes and therefore not to be relied on as weatherproofing on site.