



## Armorshield™ Fitting Guide

Place the external part of the Armorshield™ (containing the two grub screws) over the external side of the cylinder.

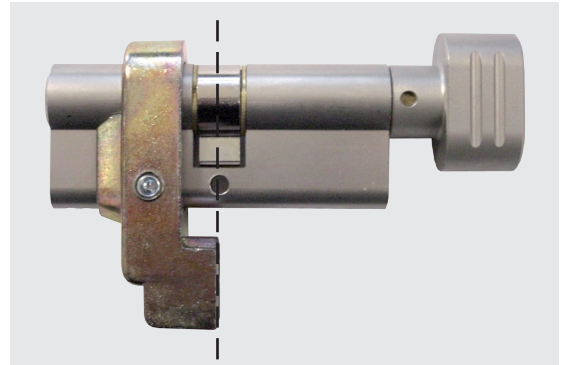


Align the lower part of the Armorshield™ with the centre of the cam or screw hole and equally tighten the two grub screws onto the cylinder.

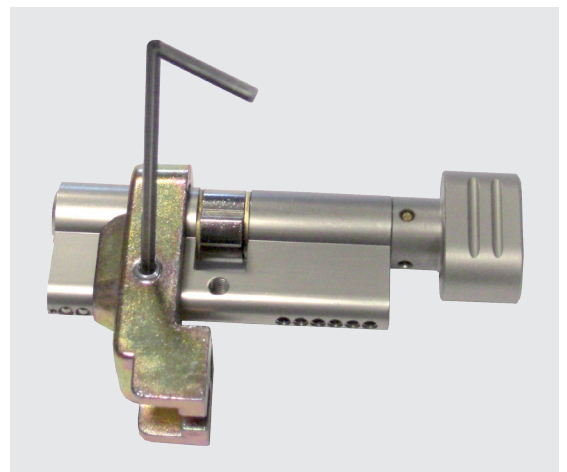

Next install the cylinder into the pre-prepared door leaf from the external side (removing the thumb-turn where required, see separate instructions).

Install the cylinder in the normal manner aligning the cylinder retention screw through the lock face-plate.

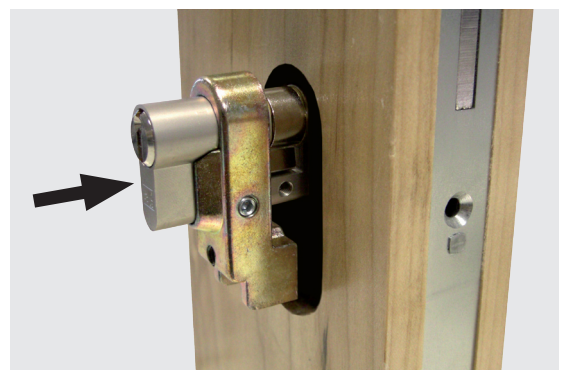

Next apply the inner part of the Armorshield™ to the inside of the door leaf and securely fasten the two halves together using the supplied bolt.

Finally, refit the handles and thumb-turn where required.

